



How to Fix Error 20

How to repair your camera when it receives the Error 20, a Mechanical Malfunction.

Written By: Sean



INTRODUCTION

A walk-through of the steps needed to solve the error 20 on a canon t2i.

Step 1 — Remove Debris



- Check to make sure there is nothing physically preventing the shutter from opening.

⚠ Do not touch the mirror. You will leave fingerprints.

Step 2 — The Battery



- Remove the battery and wait 30 seconds.
- Put the battery back in.

Step 3 — The Memory Card



- Remove the memory card and wait 30 seconds.
- Put the memory card back in.

Step 4 — The Power



- Turn the power off and wait 30 seconds.
- Turn the power back on.

Step 5 — The Shutter



- If a shutter can be found to be purchased individually, replace the Shutter.
- ⚠ Be careful to not touch the mirror. You will leave fingerprints.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 08:32:34 AM.